COMMODORE DISKETTE DIAGNOSTIC MANUAL 1571 VERSION 1.0

Preliminary

PN 314055-01



COMMODORE DISKETTE DIAGNOSTIC MANUAL 1571 VERSION 1.0

Preliminary PN 314055-01

Commodore Business Machines, Inc. 1200 Wilson Drive, West Chester, Pennsylvania 19380 U.S.A.

Commodore makes no expressed or implied warranties with regard to the information contained herein. The information is made available solely on an as is basis, and the entire risk as to quality and accuracy is with the user. Commodore shall not be liable for any consequential or incidental damages in connection with the use of the information contained herein. The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty as to quality or suitability of such replacement part. Reproduction or use without expressed permission, of editorial or pictorial content, in any matter is prohibited.

This manual contains copyrighted and proprietary information. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by an means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Commodore Electronics Limited.

Copyright $\ensuremath{\circledcirc}$ 1985 by Commodore Electronics Limited. All rights reserved.

VERSION 1.0 TEST DISKETTE INTRODUCTION

THIS MANUAL AND THE DISK BASED TESTS ARE PRELIMINARY. WHEN FINAL TESTS ARE COMPLETED THEY WILL BE RELEASED ALONG WITH ANY NECESSARY UPDATES TO THE MANUAL.

This manual was developed to aid you in the use of the Diagnostics available for Repair Troubleshooting of the 1571 Single Disk Drive.

The below listing is the directory of the Version 1.0 Test Diskette and a brief explanation of each program. More detailed information is contained inside this manual.

Disk Name - 1571 Test V1.0

PGM 1 - "Menu"

PGM 2 - "Logic Bin"

PGM 3 - "Logic Diagnostic"

PGM 4 - "System Test"

PGM 5 - "System Test Bin1" PGM 6 - "System Test Bin2"

PGM 7 — "Performance Test"

PGM 8 - "Performance Bin"

PGM 9 - "Read/Write Test"

PGM 10 - "Read/Write Bin"

PGM 11 - "Final Test"

PGM 12 - "Final Test Bin"

PGM 13 - "R/W Burn-in" PGM 14 - "Alignment Inst"

PGM 15 - "Disk Alignment"

* * Diagnostic Test Menu for 1571 Test V 1.0 Disk

* * Binary File Loaded Prior to the Logic Diagnostic

* * Logic Test and Flash Code for 1571

* * System Test for the 1571

** Binary File Loaded Prior to the System Test

** Binary File Loaded Prior to the System Test

** Performance Read/Write Test for the 1571

** Binary File Loaded Prior to Performance Test

** Read/Write Test for the 1571

* * Binary File Loaded Prior to Read/Write Test

** Final Test for the 1571

** Binary File Loaded Prior to the Final Test

** Extended Read/Write Test for the 1571 ** Instructions to Run the Alignment Test

** Alignment Test — C-64/1541 Mode Only

MENU VERSION 1.0

DESIGNED TO AUTO-BOOT THE DIAGNOSTIC TESTS.

REQUIRED EQUIPMENT: C-128 COMPUTER

1571 SINGLE DISK DRIVE

40 OR 80 COLUMN MONITOR OR TV SET VERSION 1.0 TEST PROGRAM DISKETTE

YOU MUST USE DOUBLE SIDED — DOUBLE DENSITY DISKETTES FOR ALL TESTS

To LOAD the diagnostic menu the following steps must be implemented:

- 1. Insert the test program disk version 1.0 into the 1571.
- 2. Hold down the 'SHIFT KEY' and press the 'RUN/STOP KEY'.

When the MENU is loaded, select the following:

Press '1' to load the LOGIC DIAGNOSTIC	_	See Page	2
Press '2' to load the SYSTEM TEST	_	See Page	3
Press '3' to load the PERFORMANCE TEST	_	See Page	6
Press '4' to load the READ/WRITE TEST	-	See Page	8
Press '5' to load the FINAL TEST	_	See Page	10
Press '6' to load the READ/WRITE BURN-IN	_	See Page	12
Press '7' to load the ALIGNMENT TEST	_	See Page	15

LOGIC DIAGNOSTIC

DESIGNED TO TEST THE 1571 SINGLE DISK DRIVE.

REQUIRED EQUIPMENT: C-128 COMPUTER

1571 SINGLE DISK DRIVE

40 OR 80 COLUMN MONITOR OR TV SET VERSION 1.0 TEST PROGRAM DISKETTE

ESTIMATED TEST TIME: 1 MINUTE

When the program is loaded, press 'F1' to begin testing.

· A diskette is not needed for this test.

When 'F1' has been pressed, the LOGIC DIAGNOSTIC CODE is downloaded to the 1571.

When the download is complete, the ACTIVITY LED BLINKING prompt is displayed:

Press 'F3' if LED is not blinking

Download has failed — Reset 1571 and retry download

or

Press 'F1' if LED is blinking

When 'F1' is selected, an error flash code chart is displayed. The status of the 1571 logic is indicated by short blinks of the activity LED, followed by a long time interval, per the following chart:

- 1 FLASH LOGIC IS OK
- 2 FLASHES REPLACE DOS ROM PCB LOCATION U02
- 3 FLASHES REPLACE RAM IC PCB LOCATION U03
- 4 FLASHES REPLACE 6522 IC PCB LOCATION U04
- 5 FLASHES REPLACE 6522 IC PCB LOCATION U09
- 6 FLASHES REPLACE 6526/8520 PCB LOCATION U20
- 7 FLASHES REPLACE WD1770 PCB LOCATION U11

When the download is complete, the Logic Diagnostic is executing entirely from the 1571 DOS and the C-128 may be disconnected.

Press 'F1' to test more drives

Press 'F3' to exit from the test

ONCE THE LOGIC DIAGNOSTIC HAS BEEN DOWNLOADED TO A 1571, IT IS NECESSARY TO RESET (TURN OFF AND ON) THE 1571 BEFORE IT CAN BE ACCESSED.

SYSTEM TEST

DESIGNED TO TEST THE ZERO STOP, ACTIVITY LED, WRITE-PROTECT, HEAD BUMP, FORMAT OPERATION, R/W OPERATION AND DRIVE COMPATIBILITY OF THE 1571 SINGLE DISK DRIVE.

REQUIRED EQUIPMENT: C-128 COMPUTER

1571 SINGLE DISK DRIVE (DEVICE 8)

1571 SINGLE DISK DRIVE (DEVICE 9) - OPTIONAL

40 OR 80 COLUMN MONITOR OR TV SET FORMATTED (WRITE-PROTECTED) DISKETTE

BLANK DISKETTE

VERSION 1.0 TEST PROGRAM DISKETTE

ESTIMATED TEST TIME: 6 MINUTES

The instructions are displayed:

- 1. Insert FORMATTED, WRITE-PROTECTED diskette.
- 2. Press 'SPACE' to begin test.

The ZERO STOP is checked by executing a 5 count loop to zero track and reading a pre-written sync mark on the diskette.

The WRITE PROTECT is checked by attempting to format the write-protected diskette and reading back the error channel.

When the 'Activity LED Blinking Rapidly' prompt is displayed:

Press 'F3' if LED is NOT rapidly blinking
 * SYSTEM FAILS — Bad Write-Protect Sensor

OI

Press 'F1' if LED is rapidly blinking
 * The BUMP TEST is downloaded

The BUMP TEST checks track 1 by bumping the head against the zero stop 5 times and checking that the head comes back on track.

Pass/Fail Messages will appear and instructions are displayed:

- 1. Remove write-protected diskette.
- 2. Insert BLANK disk.
- 3. Press 'SPACE' to continue test.

SYSTEM TEST (Continued)

The FORMAT OPERATION is checked by executing a GCR Format to all tracks with an ID written to all sectors.

• The OK message will appear

APPROXIMATELY 3 MINUTES

When the GCR format is complete the following tests are executed:

- A file is opened a data file is written file is closed.
- A file is opened the data file is read and verified file is closed.
- The data file is scratched.

The 1541 SLOW MODE is checked by:

- Writing data to tracks 5,15,25,35
- Reading and verifying written data from tracks 35,25,15,5

The 1571 FAST MODE is checked by:

- Writing data to tracks 40,50,60,70
- Reading and verifying written data from tracks 70,60,50,40.

The MFM BURST FORMAT is checked by formatting:

TRACK	BYTES/SECTO		
1	128		
2	512		
36	1024		
37	256		
38	512		
39	128		

The BURST READ/WRITE is checked by writing, reading and comparing data on:

When the BURST OPERATIONS are complete the COMPATIBILITY TEST options will be given:

- 1. Remove disk from device #8.
- 2. Insert in device #9.
- 3. Press 'R' if no device #9 is present.* Skips compatibility test
- 4. Press 'SPACE' to begin compatibility test.

SYSTEM TEST (Continued)

The 1541 SLOW MODE COMPATIBILITY is tested by:

Reading and verifying data from tracks 5,15,25,35.

The 1571 FAST MODE COMPATIBILITY is tested by:

Reading and verifying data from tracks 40,50,60,70.

The BURST READ COMPATIBILITY is checked by reading and verifying data from:

Tracks - 01,02,36,37,38,39 - Side 0 Tracks - 79,78,77,76,42,41 - Side 1

The PASS/FAIL Message appears.

An OPTION MENU is given:

Press C TEST ANOTHER DRIVE
Press D DONE TESTING
Press R RETURN TO MAIN MENU

PERFORMANCE TEST

DESIGNED TO TEST THE FORMAT, FAST/SLOW MODE AND READ/WRITE OPERATION OF THE 1571 SINGLE DISK DRIVE.

REQUIRED EQUIPMENT: C-128 COMPUTER

1571 SINGLE DISK DRIVE

40 OR 80 COLUMN MONITOR OR TV SET

FORMATTED OR BLANK DISKETTE VERSION 1.0 TEST PROGRAM DISKETTE

ESTIMATED TEST TIME: 4 MINUTES

When the program is loaded, select the following:

Press 'F' if the diskette being used for the test is already formatted.

Press 'U' if the diskette being used for the test is not formatted.

If the 'F' (FORMATTED) option was selected:

- 1. Remove program disk and insert a FORMATTED diskette.
- 2. Press 'SPACE' to begin the test.
- 3. A QUICK FORMAT command is executed.
 - Only the HEADER is written to the diskette.

If the 'U' (UNFORMATTED) option was selected:

- 1. Remove program disk and insert a BLANK diskette.
- 2. Press 'SPACE' to begin the test.
- 3. A LONG FORMAT command is executed.
 - · ALL tracks are formatted with an ID written to all sectors.

When the FORMAT option is complete, the following tests are executed:

- A file is opened a data file is written the file is closed.
- A file is opened the data file is read and verified the file is closed.
- The data file is scratched from the diskette.

The 1541 SLOW MODE is checked by:

- Writing data to tracks 5 and 35.
- Reading and verifying the written data from tracks 35 and 5.

PERFORMANCE TEST (Continued)

The 1571 FAST MODE is checked by:

- Writing data to tracks 40 and 70.
- · Reading and verifying written data from tracks 70 and 40.

The MFM BURST FORMAT is checked by formatting:

TRACK	BYTES/SECTOR
1	128
2	512
36	1024
37	256
38	512
39	128

The BURST READ/WRITE is checked by writing, reading and comparing data on:

The PASS/FAIL Message will be displayed.

 An OK message will appear at various points thoughout the test. When a failure is encountered it will be displayed or the test will halt.

An OPTION MENU is given:

Press C TEST ANOTHER DRIVE

Press D DONE TESTING

Press R RETURN TO MAIN MENU

^{* *} A failure during burst operations is often due to a bad diskette or a double-sided, double-density diskette not being used.

READ/WRITE TEST

DESIGNED TO TEST THE READ/WRITE OPERATION OF THE 1571 SINGLE DISK DRIVE. (SOFT-ERROR TESTING)

REQUIRED EQUIPMENT: C-128 COMPUTER

1571 SINGLE DISK DRIVE

40 OR 80 COLUMN MONITOR OR TV SET

PRINTER (OPTIONAL)
FORMATTED DISKETTE

VERSION 1.0 TEST PROGRAM DISKETTE

ESTIMATED TEST TIME: 10 MINUTES

When the program is loaded:

- 1. Remove the TEST PROGRAM diskette.
- 2. Insert a FORMATTED diskette.
- 3. Press 'RETURN' to begin the test.

The MFM FORMAT is checked by formatting:

APPROXIMATELY 3 MINUTES

TRACKS	BYTES/SECTOR
00-09	128
10-19	256
20-29	512
30-39	1024

The READ/WRITE operation is checked by:

APPROXIMATELY 5 MINUTES

- Randomly writing data to tracks 0-39.
- Randomly reading data from tracks 0-39. The data being read is displayed as "reverse field"
 S on the screen.

When the READ/WRITE TEST is complete, the test results are displayed in the following format:

NUMBER OF PASSES: The total number of passes completed on the system. A pass is a read or write to 1 sector on all tracks. The number of passes is preset to 4.

TOTAL ERRORS: The total number of errors that were encountered during the test.

COUNTABLE ERRORS: The total number of errors that were encountered that required more than one (1) retry to recover. This value is obtained by TOTAL ERRORS minus RECOVERED ERRORS.

PASS/ERROR RATIO: The number of passes versus the number of encountered errors. This value is obtained by NUMBER OF PASSES divided by NUMBER OF COUNTABLE ERRORS.

READ/WRITE TEST (Continued)

FIRST PASS RETRIES: The total number of retries that were not successful.

This value is obtained by NUMBER OF RETRIES minus FIRST RETRIES. These are determined for the first pass only.

If an ERROR is encountered, the following information is also displayed:

TRACK, ERROR, FIRST PASS RETRIES: This listing breaks down the errors on a per track basis. A bad diskette is indicated by errors concentrated on the same track or adjacent tracks.

ERROR TYPE: This listing breaks down the errors according to the type as shown below:

- A. NHRD Block Header Not Found
- B. NADM Address Mark Not Found
- C. DCRC Data CRC Error
- D. VRFY Verify Error (Read after Write Failed)
- E. HCKS Checksum Error in Header Field

RECOVERY COUNT: Total number of retries required to recover errors.

Once the test results are displayed, an OPTION MENU is given:

Press C TEST ANOTHER DRIVE

Press D DONE TESTING

Press R RETURN TO MAIN MENU

FINAL TEST

DESIGNED TO TEST THE FORMAT AND READ/WRITE OPERATION OF THE 1571 SINGLE DISK DRIVE.

REQUIRED EQUIPMENT: C-128 COMPUTER

1571 SINGLE DISK DRIVE (DEVICE 8)

1571 SINGLE DISK DRIVE (DEVICE 9) — OPTIONAL

40 OR 80 COLUMN MONITOR OR TV SET

FORMATTED DISKETTE BLANK DISKETTE

VERSION 1.0 TEST PROGRAM DISKETTE

ESTIMATED TEST TIME: 6 MINUTES

When the program is loaded, select the following:

REMOVE PROGRAM DISK

Press '1' to select FORMAT option.

Press '2' to select READ/WRITE option.

Press '3' to display TEST RESULTS — AFTER Read/Write Test is complete.

Press 'A' to execute ALL the listed options.

If '1' is selected, the MFM FORMAT is checked by formatting:

BYTES/SECTOR
128
256
512
1024

APPROXIMATELY 3 MINUTES

If '2' is selected, the READ/WRITE TEST is downloaded to the 1571.

APPROXIMATELY 1 MINUTE

- When the download is complete, the Read/Write Test executes entirely from DOS and the 1571 may be disconnected.
- If the 'A' (All Options) is selected do not disconnect the 1571.

APPROXIMATELY 2.5 MINUTES

Press 'C' if the C-128 is disconnected.

Press 'R' to return to the option menu.

FINAL TEST (Continued)

If '3' is selected, the test RESULTS are displayed in the following format:

FIRST PASS ERRORS Displays errors per track for the first test pass

SECOND PASS ERRORS — Displays errors per track for the second test pass

RETRY ERROR COUNT — Displays number of necessary retries

ERROR TYPE Displays types of errors encountered:

> CRC - Data CRC Error

- Retry Count Not Found RNF - Address Mark Not Found ADM

When all test results are displayed, the OPTION MENU will appear:

Press C TEST ANOTHER DRIVE Press D DONE TESTING

Press R RETURN TO MAIN MENU

READ/WRITE BURN-IN

DESIGNED TO TEST THE FORMAT, READ/WRITE AND VERIFY OPERATIONS OF THE 1571 SINGLE DISK DRIVE IN 1 OR 2 MHZ MODE.

REQUIRED EQUIPMENT: C-128 COMPUTER

1571 SINGLE DISK DRIVE

40 OR 80 COLUMN MONITOR OR TV SET

FORMATTED OR BLANK DISKETTE

VERSION 1.0 TEST PROGRAM DISKETTE

When the program is loaded, select the following:

Press '4' if you are using a 40 column monitor or a TV set.

Press '8' if you are using an 80 column monitor.

When the monitor selection has been made, the OPTION MENU is displayed:

Press 'F' to select the FAST test.

APPROXIMATELY 2 MIN. PER PASS

Press 'S' to select the SLOW (burn-in) test.

APPROXIMATELY 35 MIN. PER PASS

When the type of test has been selected, the following options are offered:

1. Select the SPEED MODE of the test:

Press '1' to run the test in the 1 MHz Mode.

Press '2' to run the test in the 2 MHz Mode.

- An 80 Column Monitor is required for 2 MHz Mode.
- 2. Select the DRIVE MODE of the test:

Press '4' to run the test in the 1541 Mode.

Press '7' to run the test in the 1571 Mode.

3. Select the NUMBER of passes the test is to run:

10 Passes is suggested for the Fast Test

2 Passes is suggested for the Slow Test

READ/WRITE BURN-IN (Continued)

The FORMAT operation of the drive is checked by:

MFM - MFM Format at 128, 256, 512 and 1024 Bytes/Sector.

• MFM Format is done in the 1571 Mode only.

GCR - GCR Format writing a header only with no ID written - Fast Test.

GCR Format of all tracks with an ID written to all sectors - Slow Test.

• GCR Format is done in both 1541 and 1571 Modes.

The WRITE operation of the drive is checked by:

Three files are saved to the diskette.

• The files are saved in both 1541 and 1571 Modes.

The write operation is VERIFIED by:

Reading the directory to ensure the three files were properly saved.

The READ/WRITE operation of the drive is tested by:

Reading — Writing — Reading and Verifying — per the following:

Fast Test — 1541 Mode — Tracks — 01,05,10,15,20,25,30,35

Sectors - 00,08,16

Slow Test - 1541 Mode - Tracks - 01 thru 35

Sectors - 00 thru 16

Fast Test - 1571 Mode - Tracks - 01,10,20,30,40,50,60,70

Sectors - 00,08,16

Slow Test - 1571 Mode - Tracks - 01 thru 70

Sectors - 00 thru 16

The test RESULTS are displayed at the end of the test in the following format:

PASSES — Total number of passes run.

TOTAL ERRORS — Total errors encountered during all operations.

The error list displays all errors on a per operation basis as:

MFM 128 BYTE — Number of errors encountered during the 128 Byte/Sector MFM

Format Operation.

MFM 256 BYTE — Number of errors encountered during the 256 Byte/Sector MFM

Format Operation.

READ/WRITE BURN-IN (Continued)

MFM 512 BYTE	 Number of errors encountered during the 512 Byte/Sector MFM Format Operation.
MFM 1024 BYTE	 Number of errors encountered during the 1024 Byte/Sector MFM Format Operation.
GCR FORMAT	 Number of errors encountered during the GCR Standard Format Operation.
FILE SAVE	— Number of errors encountered during the Saving File Operation.
DIRECTORY	 Number of errors encountered during the Directory Read Operation.
READ	 Number of errors encountered during the Read Operation. * Includes both Read and Read and Verify Operations.
WRITE	 Number of errors encountered during the Write Operation.
COUNTABLE	 Number of Read and Write errors that required more than one (1) retry to recover.
TOTAL RUN TIME	 Total elapsed time since test started.
BOTTOM LINE	 Final determination if the system Passes or Fails the test.

ALIGNMENT TEST

DESIGNED TO TEST THE LED, WRITE-PROTECT, DRIVE BELT, MOTOR SPEED AND HEAD ALIGN-MENT OF THE 1571 SINGLE DISK DRIVE.

REQUIRED EQUIPMENT: C-128 COMPUTER

1571 SINGLE DISK DRIVE MONITOR OR TV SET DUAL TRACE SCOPE

ALIGNMENT DISKETTE (CBM P/N 970016-01)

FORMATTED DISKETTE

VERSION 1.0 TEST PROGRAM DISKETTE

NOTE

THE 1.0 VERSION OF THE ALIGNMENT TEST MUST BE LOADED AND RUN WITH THE C-128 IN THE C-64 MODE AND THE 1571 IN THE 1541 MODE.

Press 7 to load the program from the menu.

Instructions will be displayed to enter the 64 mode:

- 1 Type GO 64 Press RETURN
- 2— When the "Are you sure?" prompt appears:

Type Y Press RETURN

3 — When the C-64 screen appears:

Type LOAD "DISK ALIGNMENT", 8
Press RETURN

4 — When the program is loaded:

Type RUN

* NOTE: The NUMERIC KEYPAD of the 128 is NOT operational in 64 mode.

When the program is run, the following options will be available:

- 1. Press 'SPACE' to run ALL AVAILABLE tests.
 - This is the recommended option.
- 2. Press '1' to test for proper drive LED operation. (GREEN ACTIVITY LED)
- 3. Press '2' to test for proper WRITE PROTECT SENSOR operation.

ALIGNMENT TEST (Continued)

- 4. Press '3' to test for proper STEPPER MOTOR.
- 5. Press '4' to check DRIVE BELT status and display the current MOTOR SPEED.
 - The motor speed is out-of-tolerance if the indicated reading is different than -1ms,
 Oms or +1ms.
- 6. Press '5' to allow for monitoring of the CATS EYE SIGNAL for evenness, correct amplitude and to adjust if necessary. Rotate the stepper motor to obtain maximum display per Figure 1-1 and 1-2.
 - This option requires a special 48 TPI alignment diskette. (Commodore part number 970016-01).
 - A dual trace scope, with external sync capabilities, will be necessary for proper alignment. The probes are to be connected as follows:

```
PROBE 1 — Pin 17 — IC U7 — TP1
PROBE 2 — Pin 18 — IC U7 — TP2
EXT SYNC — Pin 17 — IC U6
```

- Scope should be set at 20mS and .1v/div. Add channel 1 and 2, press invert and adjust for the best possible display of the Cats Eye Signal.
- ONLY the lower head can be tested for alignment at this time. The final version will include upper head capabilities.

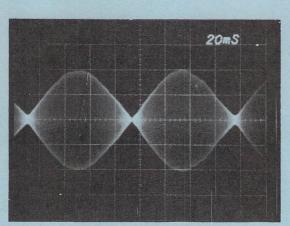


Figure 1-1. Head Radial Alignment

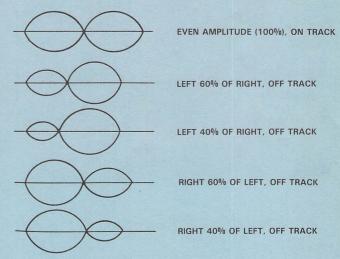


Figure 1-2. R/W Head Radial Alignment

- 7. Press '6' to do the final READ/WRITE test on the 1571.
 - This test reads, writes and verifies data to random tracks on the diskette.

A known good formatted diskette is necessary here.

8. Press '7' to END.

		STEPPER MOTOR CONTR	OL LOGIC CHART	
STP Ø DISPLAY	STP 1 DISPLAY	CHECK IC PINS	EXPECTED SIGNAL	INCORRECT SIGNAL PROBABLE FAILURE
Ø Ø Ø Ø Ø Ø Ø	Ø Ø Ø Ø Ø Ø Ø	U4 - 10 U4 - 11 U13 - 3 U7 - 23 U7 - 30 U7 - 29 U7 - 31 U7 - 25,28 U7 - 24,27	0 VDC 0 VDC +5 VDC 0 VDC 0 VDC +1 VDC +1 VDC 0 VDC +5 VDC	U4 - U13 - U17 U4 - U13 - U14 - U8 U13 - U6 U6 - U7 U13 - U7 U6 - U7 U8 - U7 U7
Ø Ø Ø Ø Ø Ø	1 1 1 1 1 1 1	U4 - 10 U4 - 11 U13 - 3 U7 - 23 U7 - 30 U7 - 29 U7 - 31 U7 - 25,28 U7 - 24,27	Ø VDC +5 VDC Ø VDC +1 VDC +1 VDC Ø VDC Ø VDC +5 VDC Ø VDC	U4 - U13 - U17 U4 - U13 - U14 - U8 U13 - U6 U6 - U7 U13 - U7 U6 - U7 U8 - U7 U7
	Ø Ø Ø Ø Ø Ø Ø Ø	U4 - 10 U4 - 11 U13 - 3 U7 - 23 U7 - 30 U7 - 29 U7 - 31 U7 - 25 U7 - 28 U7 - 24 U7 - 27	+5 VDC Ø VDC Ø VDC +1 VDC Ø VDC U VDC +1 VDC Ø VDC +1 VDC Ø VDC +5 VDC Ø VDC +5 VDC	U4 - U13 - U17 U4 - U13 - U14 - U8 U13 - U6 U6 - U7 U13 - U7 U6 - U7 U8 - U7 U7 U7 U7 U7
1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1	U4 - 10 U4 - 11 U13 - 3 U7 - 23 U7 - 30 U7 - 29 U7 - 31 U7 - 25 U7 - 28 U7 - 24 U7 - 27	+5 VDC +5 VDC +5 VDC Ø VDC +5 VDC +5 VDC Ø VDC +5 VDC Ø VDC +5 VDC Ø VDC	U4 - U13 - U17 U4 - U13 - U14 - U8 U13 - U6 U6 - U7 U13 - U7 U6 - U7 U8 - U7 U7 U7 U7

The below listed signals must be measured while one of the keys (+/-), is being held down and the head is being stepped either in or out.

STEPPER MOTOR CONTROL	LOGIC CHART	n nga Palawa a n	

CHECK IC PINS	EXPECTED SIGNAL	INCORRECT SIGNAL PROBABLE FAILURE
U13 - 4 U16 - 13 U16 - 12	Ø VDC LEVEL TO +5 VOLT POSITIVE PULSES Ø VDC LEVEL TO +5 VOLT POSITIVE PULSES +12 VDC LEVEL TO Ø VOLT NEGATIVE PULSES	U13 - U22 U22 - U16 U16 - Q1
CHECK CN5 PINS	EXPECTED SIGNAL	INCORRECT SIGNAL PROBABLE FAILURE
1	+5 VDC LEVEL TO +12 VOLT POSITIVE PULSES	Q1 - CR10

STEPPER MOTOR CIRCUIT TEST OPTION THREE - RETURN TO MAIN MENU

***** PRESS 'M' - RETURN TO MENU

ALIGNMENT REPAIR TEST OPTION FIVE - DATA BUS WRITE TEST

***** INPUT A TWO (2) CHARACTER HEX CODE - (00 thru FF) FOLLOWED BY A DRIVE SIDE SELECTION - (0 or 1)

***** PRESS 'M--' - RETURN TO MENU

DATA BUS WRITE CHECK

The DATA BUS WRITE TEST checks for proper Data Bus and IC Operation by forcing the data lines to a known condition. When a HEX Code is input the status of the data bus is displayed in Binary Form. (\emptyset = Low -- 1 = High) Using a scope, verify the measured data with the expected data from the Data Bus Write Chart. -- Pages 1-22 - 1-23

DATA BUS WRITE CHART

CHECK FOR DATA LINES HELD HIGH - INPUT HEX CODE '00'

DATA BUS DISPLAY	CHECK IC PINS	EXPECTED SIGNAL	INCORRECT SIGNAL PROBABLE FAILURE
00000000	U4 - 2,3,4,5 6,7,8,9	DIGITAL LOW	U4 – U6
000000000 000000000 000000000 00000000	U6 - 37 U6 - 38 U7 - 9 U7 - 10 U7 - 6 U7 - 8	DIGITAL LOW DIGITAL HIGH DIGITAL LOW DIGITAL HIGH ANALOG LOW ANALOG LOW	U6 - U14 U6 - U14 U14 - U7 U14 - U7 U7 - CR3 - CR4 U7 - CR7 - CR8

CHECK FOR DATA LINES HELD LOW - INPUT HEX CODE 'FF'

NOTE: HEX (FF) DATA IS APPROXIMENTLY TWICE THE FREQUENCY OF HEX (55) DATA

DATA BUS DISPLAY	CHECK IC PINS	EXPECTED SIGNAL	INCORRECT SIGNAL PROBABLE FAILURE
11111111	U4 - 2,3,4,5 6,7,8,9	DIGITAL HIGH	U4 - U6
11111111 11111111 11111111 11111111	U6 - 37,38 U7 - 9,10 U7 - 6	SERIAL DATA (FF) SERIAL DATA (FF) ANALOG DATA (FF) ANALOG DATA (FF)	U6 - U14 U14 - U7 U7 - CR3 - CR4 U7 - CR7 - CR8

CHECK FOR ALTERNATING DATA LINES -- INPUT HEX CODE '55'

NOTE: HEX (55) DATA IS APPROXIMENTLY HALF THE FREQUENCY OF HEX (FF) DATA

DATA BUS	CHECK IC	EXPECTED	INCORRECT SIGNAL PROBABLE FAILURE
DISPLAY	PIN	SIGNAL	
01010101	U4 - 2,4,6,8	DIGITAL HIGH DIGITAL LOW SERIAL DATA (55) SERIAL DATA (55) ANALOG DATA (55) ANALOG DATA (55)	U4 - U6
01010101	U4 - 3,5,7,9		U4 - U6
01010101	U6 - 37,38		U6 - U14
01010101	U7 - 9,10		U14 - U7
01010101	U7 - 6 •		U7 - CR3 - CR4
01010101	U7 - 8		U7 - CR7 - CR8

DATA BUS WRITE CHART

CHECK FOR ALTERNATING DATA LINES -- INPUT HEX CODE 'AA'

NOTE: HEX (AA) DATA IS APPROXIMENTLY HALF THE FREQUENCY OF HEX (FF) DATA

DATA BUS	CHECK IC	EXPECTED	INCORRECT SIGNAL PROBABLE FAILURE
DISPLAY	PIN	SIGNAL	
10101010	U4 - 2,4,6,8	DIGITAL LOW DIGITAL HIGH SERIAL DATA (AA) SERIAL DATA (AA) ANALOG DATA (AA) ANALOG DATA	U4 - U6
10101010	U4 - 3,5,7,9		U4 - U6
10101010	U6 - 37,38		U6 - U14
10101010	U7 - 9,10		U14 - U7
10101010	U7 - 6		U7 - CR3 - CR4
10101010	U7 - 8		U7 - CR7 - CR8

CHECK FOR ALTERNATING DOUBLE ADDRESS LINES -- INPUT HEX CODE '66'

NOTE: HEX (66) DATA IS DIRECTLY INVERSE TO HEX (99) DATA

DATA BUS	CHECK IC	EXPECTED	INCORRECT SIGNAL PROBABLE FAILURE
DISPLAY	PIN	SIGNAL	
01100110	U4 - 2,5,6,9	DIGITAL LOW DIGITAL HIGH SERIAL DATA (66) SERIAL DATA (66) ANALOG DATA (66) ANALOG DATA (66)	U4 - U6
01100110	U4 - 3,4,7,8		U4 - U6
01100110	U6 - 37,38		U6 - U14
01100110	U7 - 9,10		U14 - U7
01100110	U7 - 6		U7 - CR3 - CR4
01100110	U7 - 8		U7 - CR7 - CR8

CHECK FOR ALTERNATING DOUBLE ADDRESS LINES -- INPUT HEX CODE '99'

NOTE: HEX (99) DATA IS DIRECTLY INVERSE TO HEX (66) DATA

DATA BUS	CHECK IC	EXPECTED	INCORRECT SIGNAL
DISPLAY	PIN	SIGNAL	PROBABLE FAILURE
10011001 10011001 10011001 10011001 10011001	U4 - 2,5,6,9 U4 - 3,4,7,8 U4 - 37,38 U4 - 9,10 U4 - 6 U4 - 8	DIGITAL HIGH DIGITAL LOW SERIAL DATA (99) SERIAL DATA (99) ANALOG DATA (99) ANALOG DATA (99)	U4 - U6 U4 - U6 U6 - U14 U14 - U7 U7 - CR3 - CR4 U7 - CR7 - CR8

ALIGNMENT/REPAIR TEST OPTION SIX - DRIVE MOTOR CONTROL LOGIC TEST

DRIVE MOTOR CONTROL LOGIC TEST OPTIONS

PRESS '1' - TURN MOTOR ON

PRESS '0' - TURN MOTOR OFF

PRESS 'M' - RETURN TO MAIN MENU

DRIVE MOTOR CONTROL LOGIC TEST OPTION ONE - TURN DRIVE MOTOR ON DRIVE MOTOR CONTROL LOGIC TEST OPTION TWO - TURN DRIVE MOTOR OFF

These options will force the drive motor into a known condition and display the expected status, (On/Off). Using a scope or meter, verify the measured signal with the expected signal from the Drive Motor Control Logic Chart. — Page 21

DRIVE MOTOR CONTROL LOGIC CHART

DRIVE MOTOR	CHECK IC	EXPECTED	INCORRECT SIGNAL PROBABLE FAILURE
DISPLAY	PIN	SIGNAL	
OFF OFF ON	U4 - 12 U16 - 10 U4 - 12 U16 - 10	DIGITAL LOW DIGITAL HIGH DIGITAL HIGH DIGITAL LOW	U4 - U16 U16 U4 - U16 U16

DRIVE MOTOR CONTROL LOGIC OPTION THREE - RETURN TO MAIN MENU


***** PRESS 'M' - RETURN TO MAIN MENU

ALIGNMENT/REPAIR TEST OPTION SEVEN - LOAD DIAGNOSTIC MENU


INSERT THE VERSION 1.1 DIAGNOSTIC DISKETTE


***** PRESS 'SPACE' - LOAD DIAGNOSTIC MENU

***** PRESS 'R' - RETURN TO MENU

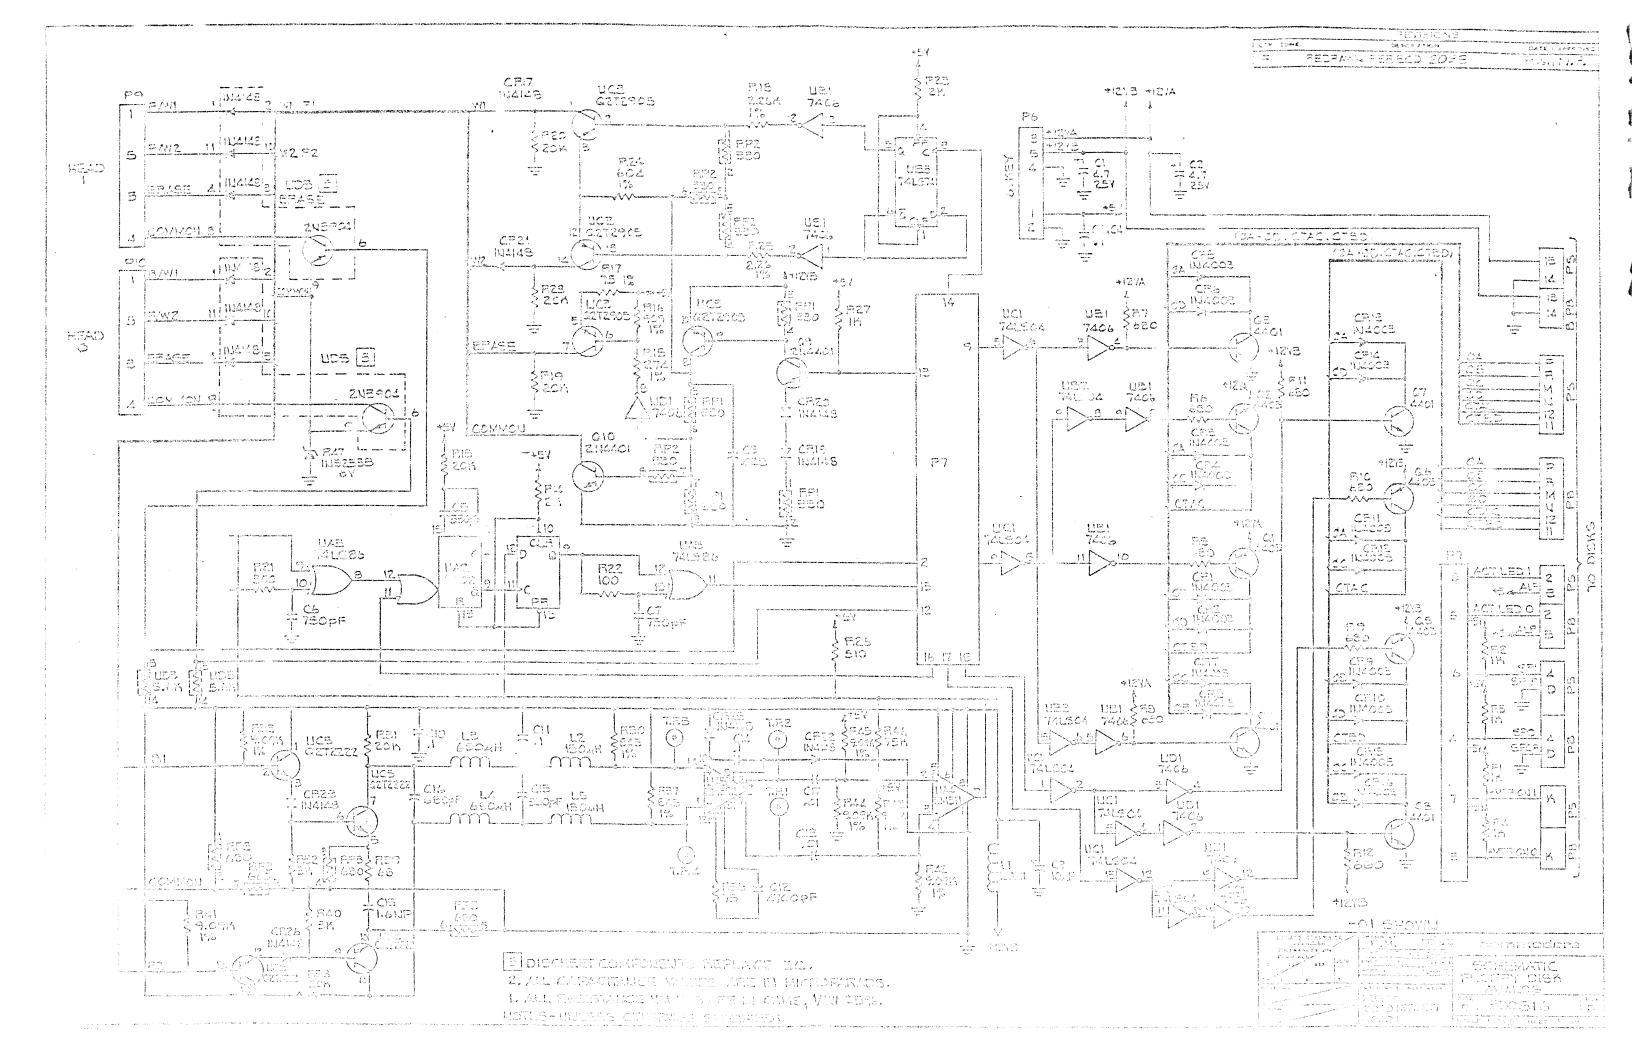

: CTRICTED DEWERNED SECTION --- Metyman, and un era bellian archeere? . YOU , ECHARACATOM WE ARE ALLIAY EROTIONED !! NAOHS 10-क्षा दावर Thair-sysy A5+ 1111 2/11 2572 \$ 123 \$ 074 \$ 072 \$ 275171 103 J 152 153 153 FORTIDY :1015 1 22/21 121 LU된 국 UNS OLF 5 24 5 841 5 841 5 841 2012 El 124 5 為美 ZIMO 7141 72 CIAL ES 2197 72 T.S. 5924 O7 1 7% HAI OS LES CAT OF FEAN 아마스 마리스 게임스 841 TI 001 641 01 864 IAI 61 264 EVIT TOB 1 2 1.7 .. 577 11 187. 24. El .:3V S. V. Z. Z. 247 -71 041 2 633 141 01 164 712 | FIN मार वि 0, 223 6 415 5 900 UNI SK てのその つからかん と 919 790 ISI 900 61 955 500 50 20 NS4 CM9 カラト こ ラ 70 नर्ज विया GO รเยสไ 90 6 23G 70 62 C7 LO CE THWSI S 700 04-0 15-1 224 040 201 8- 0 234 201 8- 5- 5-190 ET 100 177 7018 4 191 120 170 170 41 Side 1 15 ZDIG E 000 535 CYD CAT 13 947 550 20 977 कारमध् 50 **~~** 473 ESYTTEM MC ADTA SHMAI

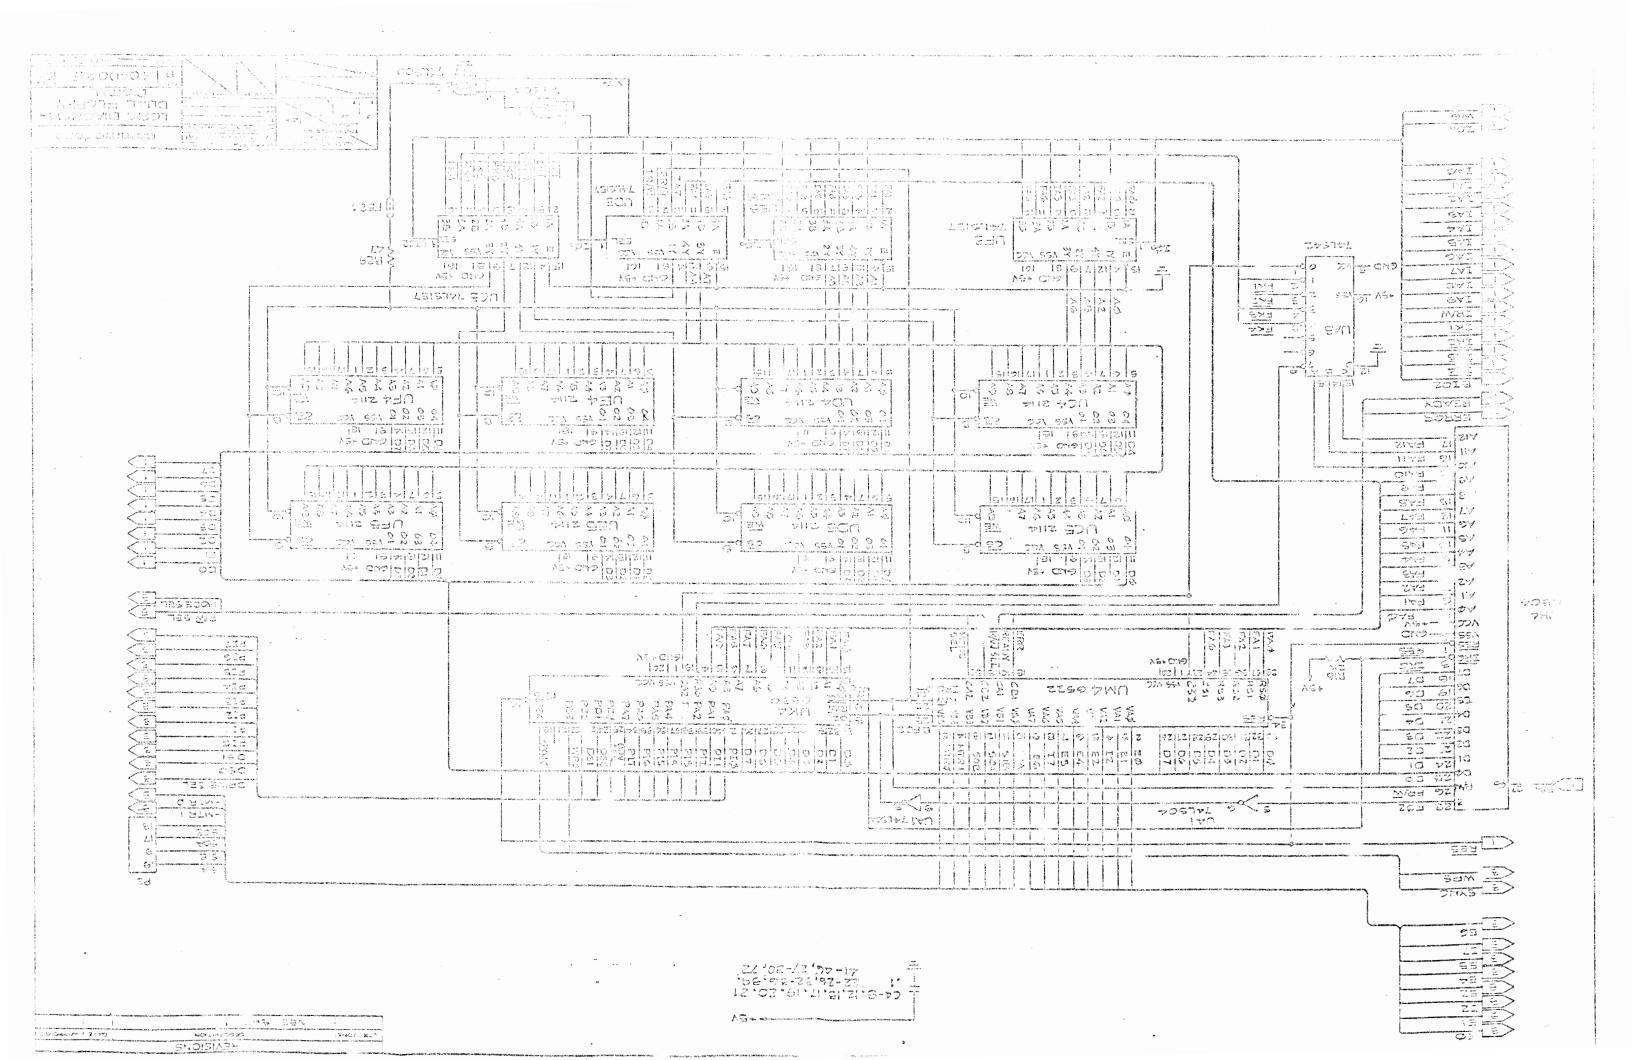

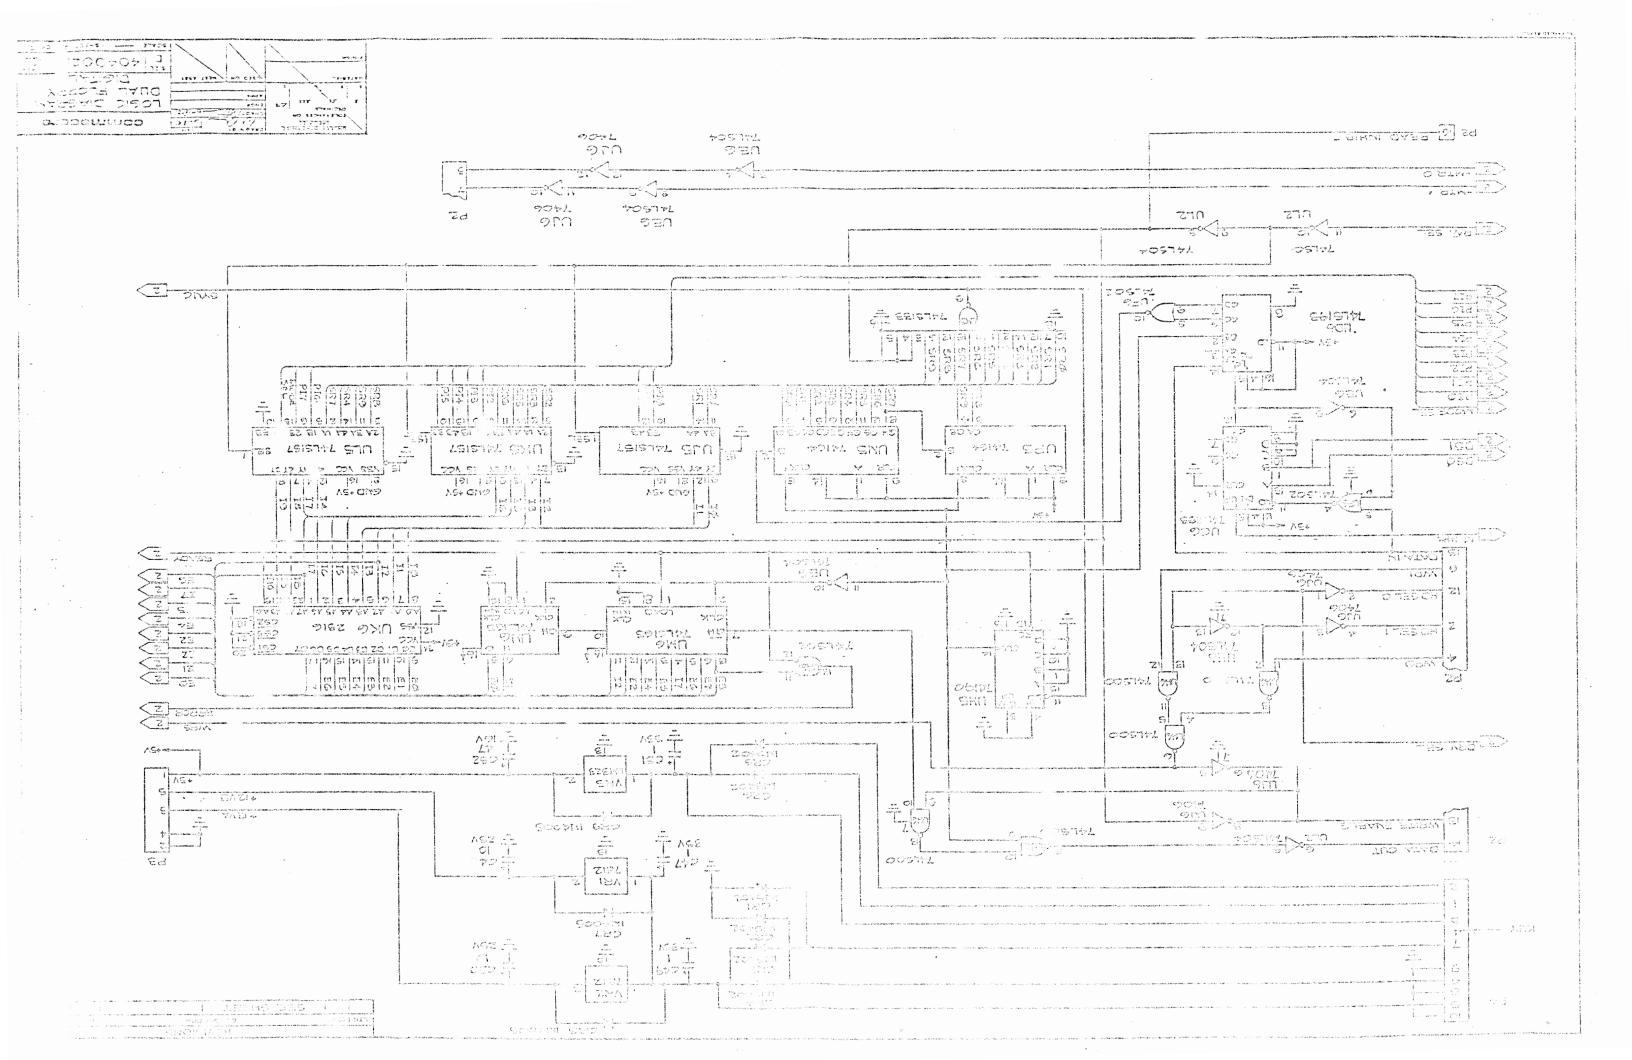



Computer Systems Division 1200 Wilson Drive West Chester, PA 19380